

4 & 5-Legged Stool W/ Welded on Backrest & no Backrests

Assembly Instructions

Before you begin, please make sure all parts and proper quantities are included. (See Part Identifier Key on next page) Any parts damaged during shipment must be reported within 24 hours of receipt. To report information regarding damages or if you have any questions, please call 800.242.2303.

Step 1:

- Place seat with inserts facing up on protected table.
- Place 4 or 5-legged frame on the top and align the most outer holes with the inserts of the seat.

Step 2:

• Insert & tighten corresponding screw for the seat you are mounting through the most OUTER mounting holes located on the bottom of the 4 or 5-legged frame. (See bottom of page for corresponding screw/bolt with type of seat.)


Step 1 Laminate Seat Hardwood Seat **Urethane Seat**

Tools Required

- 4mm Allen wrench OR
- 4mm Hex bit
- · Drill extension
- · Phillips head screwdriver OR
- · Phillips drill bit
- Screw gun



Dart #

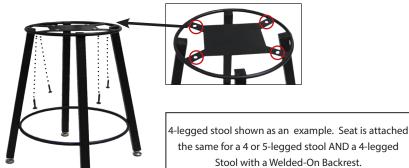

Doccrintion



Part Identifier Key

Part #	Description	Qty.	
Hardware Pack	34" Allen head machine screws (Used to attach Laminate seat)	4	
(no backrest)	34" Phillips head wooden screws (Used to attach Hardwood seat)	4	Species .
Hardware Pack 04066934	1/4-20 x 35mm joint connector bolts (Used to attach Urethane cushioned seat with backrest - please disgard)	4	
(w or wo/ backrest)	1/4-20 x 30mm joint connector bolts (Used only to attach Urethane cushioned seat without a backrest - please discard.)	4	

V040819 subject to change.