

Assembly Instructions

Before you begin, please make sure all parts and proper quantities are included. (See Part Identifier Key) Any parts damaged during shipment must be reported within 24 hours of receipt. To report information regarding damages or if you have any questions, please call 800.242.2303.

Step 1:

- Place the Contemporary top face down on a protected flat surface.

Step 2:

- Align leg with threaded inserts.
- Using a 4mm Allen wrench or 4mm Hex bit, secure table top with 10-24 x 1" joint connector bolts.
- Repeat this step for each leg.

Step 4:

- With someone's help, turn table upright.

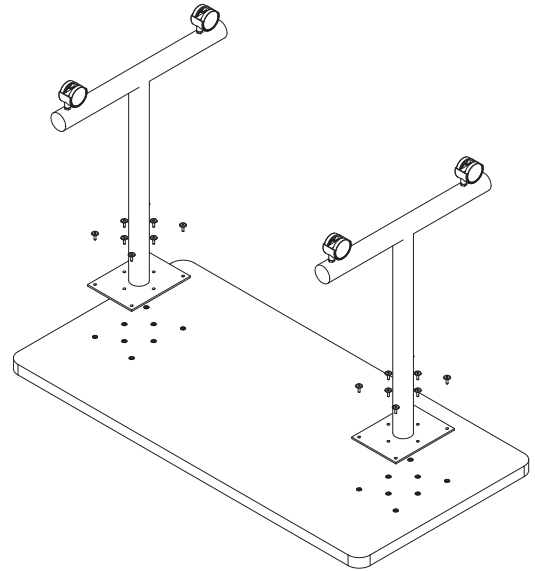


Image shown with AHC7022 T-Bases as the example for these instructions.

(The C in the model number stands for the optional casters.)

Tubular T-Bases

Fixed Base #	Part #:	Adj. Base #	Part #:	D"
7022	04066849	AH7022	04066849-AH	24 & 30
7026	04066898	AH7026	04066898-AH	36



Arch T-Bases

Fixed Base #	Part #:	Adj. Base #	Part #:	D"
7222	04066901	AH7222	04066901-AH	24 & 30
7226	04077723	AH7226	04077723-AH	36



Tools Required

- Screw gun
- 4mm Allen wrench OR
- 4mm Hex bit

DuraCast T-Bases

Fixed Base #	Part #:	Adj. Base #	Part #:	D"
5084	04067502	AH5084	04067502-AH	24
5088	04009354	AH5088	04009354-AH	30 & 36



Part Identifier Key

Part #	Description	Qty.
0401158	10-24 x 1" joint connector bolts <i>(Used to attach leg plates to laminate top)</i>	16

