

Assembly Instructions

Tools Required



- Screw Gun
- 5/32" Hex Bit
- Drill Bit Extension

Parts List: (per desk)

- (1) Lam 3mm Top
- (2) Study Carrel Legs
- (1) Modesty Panel
- (1) Front Cord Channel
- (1) Bottom Cord Channel
- (5) 4" L-Bracket Black
- (30) Screw L-Bracket Black Sq. Pan
- (4) Leveler Stem
- (1) Cable Grommet Hole 2
- (2) Cable Grommet Hole 3

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding damages or if you have any questions, please call 800.242.2303.

- 1 Slide modesty panel down into the left leg.
- 2 Attach front cord channel into left leg. Slide bottom cord channel into left leg.
- 3 Connect the 5 L-Brackets to the 3mm top. Attach two on the right and two on the left, one on the back using #10 black square pan screws.
- 4 Place top, with brackets connected, to left leg and modesty panel. Align with pre-drilled pilot holes. Use #10 black square pan screws and a screw gun to fasten top to the left leg and modesty panel.
- 5 Slide right leg up into modesty panel.
- 6 Attach the front cable channel into the right leg. Slide bottom cable channel into the right leg.
- 7 Use #10 black square pan screws and a screw gun to fasten the top to the right leg using the L-brackets.
- 8 Insert levelers into both right and left legs, two for each leg.
- 9 Push cable grommets into holes of both legs. Use one grommet for each leg.

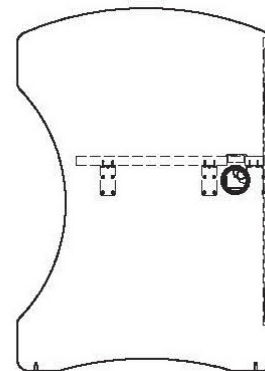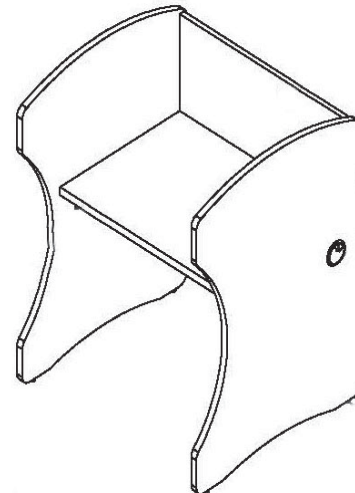

Assembly Instructions

Tools Required

- Screw Gun
- 5/32" Hex Bit
- Drill Bit Extension

Parts List: (per desk)

- (1) Lam 3mm Top
- (1) Center Leg
- (1) Modesty Panel
- (1) Front Cord Channel
- (1) Bottom Cord Channel
- (5) 4" L-Bracket Black
- (30) Screw L-Bracket Black Sq. Pan
- (2) Leveler Stem
- (1) Cable Grommet

1 Remove right leg from study carrel by unscrewing the brackets and lifting up.

2 Replace right leg with the center leg from the adder kit. Fasten the L-brackets on the top to the center leg using #10 black square pan screws and a screw gun.

3 Slide modesty panel down into the center leg.

4 Attach front cord channel into center leg. Slide bottom cord channel into center leg.

5 Connect the 5 L-Brackets to the 3mm top. Attach two on the right and two on the left, one on the back using #10 black square pan screws.

6 Place top, with brackets connected, to the center leg and modesty panel. Align with pre-drilled pilot holes. Use #10 black square pan screws and a screw gun to fasten top to the center leg and modesty panel.

7 Slide right leg, finished leg, up into modesty panel.

8 Attach the front cable channel into the right leg. Slide bottom cable channel into the right leg.

9 Use #10 black square pan screws and a screw gun to fasten top to the right leg with L-brackets.

10 Insert levelers into the center leg, two for each leg.

